 



Chromebook Quick Start Guide

Note: To prevent damage to the Chromebook please close the lid while moving it.


1. Unpack the Chromebook, plug the charger into a power outlet and then plug the charger into the Chromebook.
2. Open the lid of the Chromebook. It will power on automatically after a few seconds (no need to press the power button).
3. Since the Chromebook has not been connected to your Wi-Fi yet, you will see the following screen:

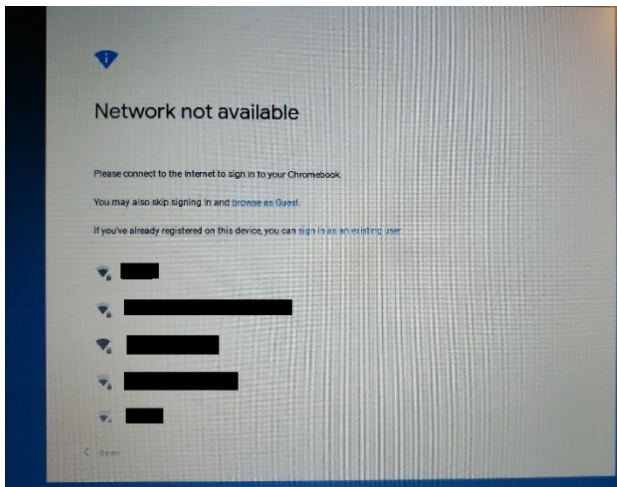

 
4. Click on the name of the Wi-Fi network that you use at your home.
5. Enter the password for your home Wi-Fi network, then click **Connect**

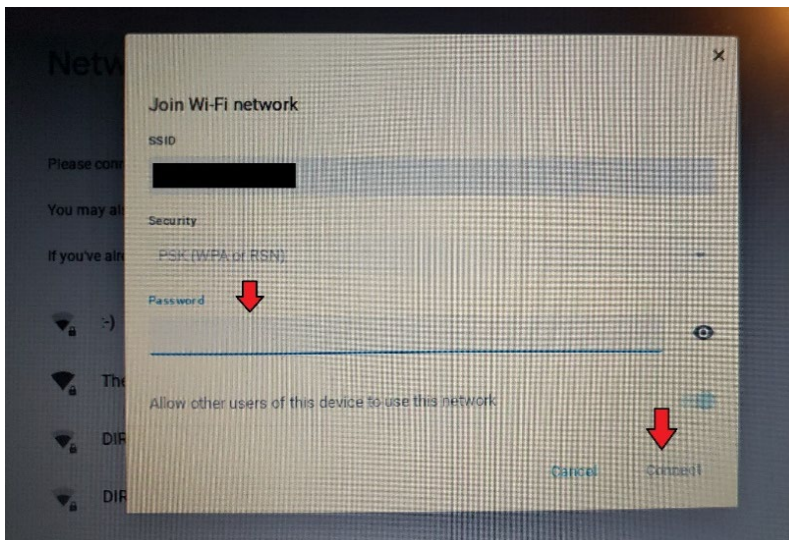

 6. After connecting, you will see the **Sign in to your Chromebook** screen. Click **Next**.

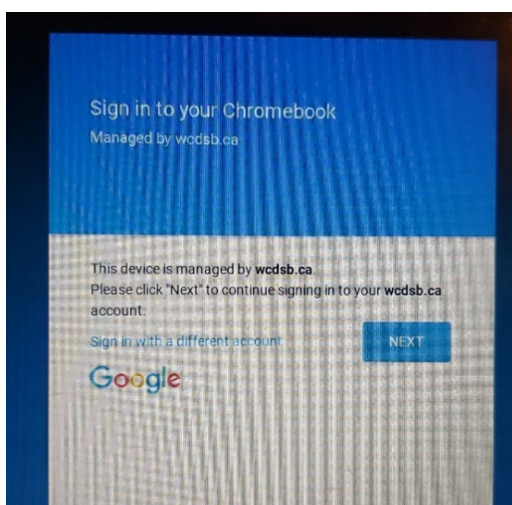

 7. Enter your student login with the *@wcdsb.ca* at the end. If you are unsure of your student login ID, please contact your teacher. Once you have entered it, click **Next**.

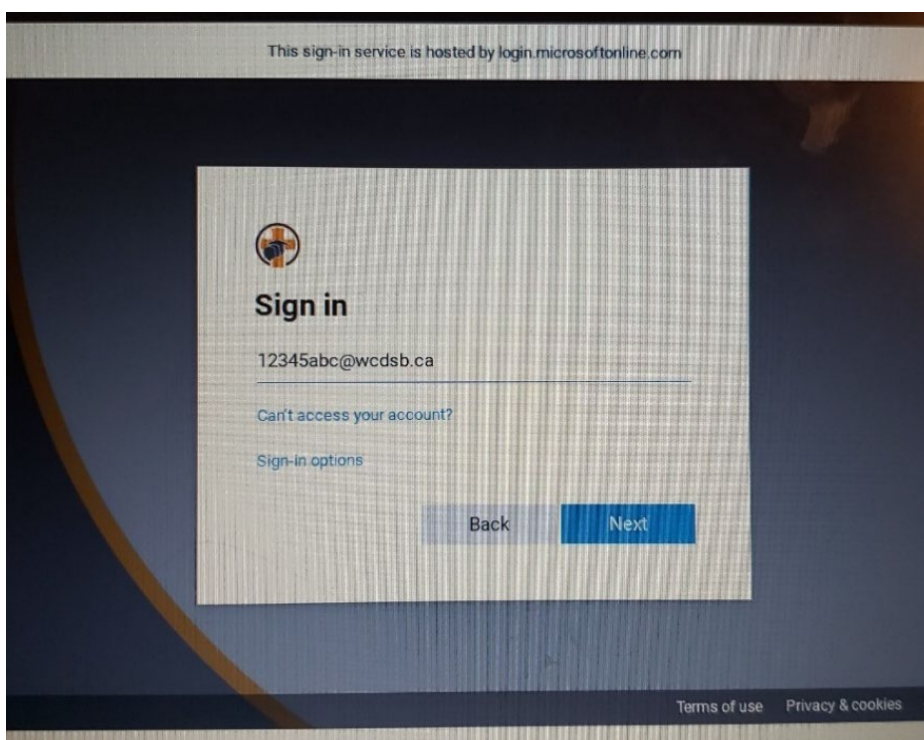

8. Enter your password, then click **Sign In**. The default password will be your date of birth in the format MMDDYYYY. If you previously changed your password, then use the password you changed it to. If you have forgotten your password or your account has been locked out, please contact your teacher to put in a help desk ticket.

If you have a hardware issue with your Chromebook, please contact our **Help line** at **519-578-3677 extension 2316**.