 



Laptop Quick Start Guide

Note: To prevent damage to the Laptop please close the lid while moving it.


1. Unpack the Laptop, plug in the charger to a power outlet, then plug the charger into the Laptop.
2. Open the lid of the Laptop. Press the power button, it will power on after a few seconds.
3. Since the Laptop has not been connected to your Home Wi-Fi yet, you will see the following screen:

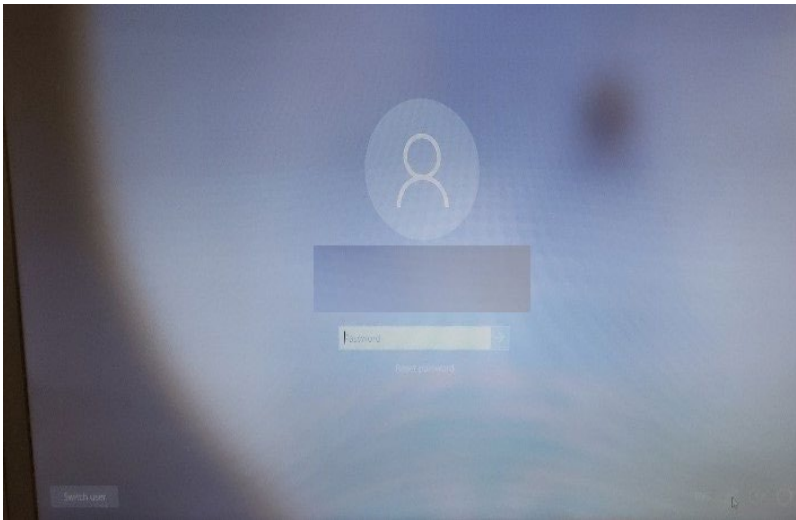

 
4. Click on the Wi-Fi icon and name of the Wi-Fi network that you use at your home.

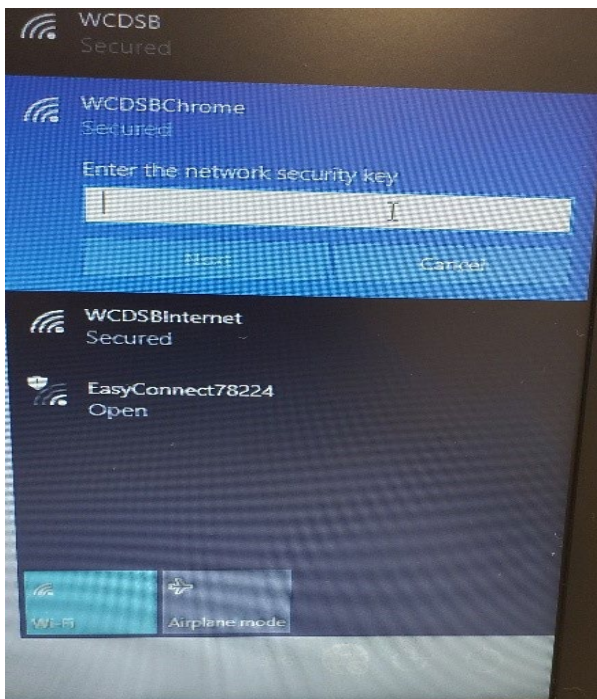

 5. Enter the password for your home Wi-Fi network, then click **Connect**

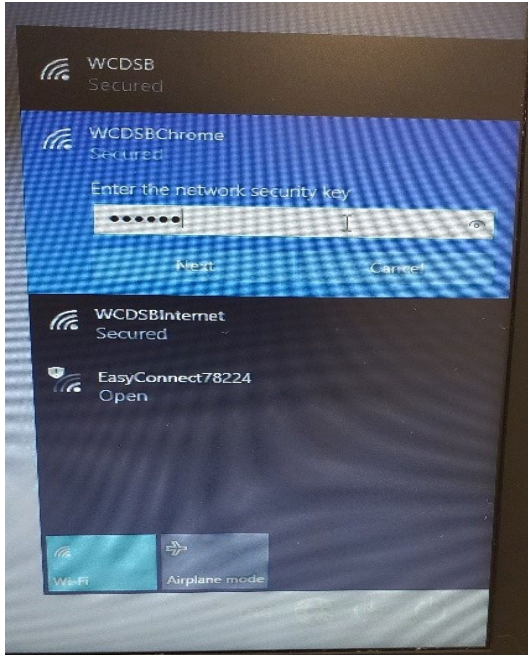

6. You will see your home Network – Connected, after connecting **Sign in to your Laptop**.

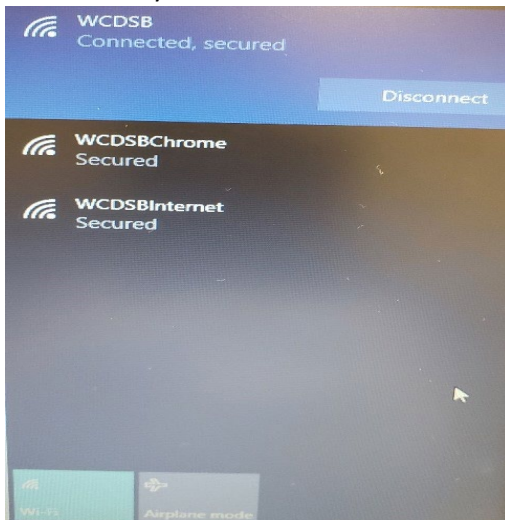

7. Enter your password, if you previously changed your password, then use the password you changed it to. If you have forgotten your password or your account has been locked out, please contact your teacher to put in a help desk ticket.

If you have a hardware issue with your Laptop,

please contact our **Help line** at **519-578-3677 extension 2316**.